

## ENR 4.3 Кодирани ознаки за значајни точки

## ENR 4.3 Name-code designator for significant points

Name-code designator	Coordinates	ATS route or other route	FRA Relevance	Remarks/Usage
BEKVA	405604N 0214142E	N146	(E) Entry Point	Entry point for departure LGTS only EVEN FL for entering aircraft
BITLA	405232N 0212129E	L616, N132, N137, N731, P859, T261, T343	(E/X) Entry Exit Point	ODD FL, FL290 or below for entering aircraft ODD FL, FL310 or above for exiting aircraft flying eastbound EVEN FL, FL 320 or below for exiting aircraft flying westbound
BUREK	414956N 0211149E	P92, T197, Y550	(A) Arrival Point	
DISOR	411450N 0224530E	L608, M867, N141, T218, Y400, Y500	(E/X) Entry Exit Point	EVEN FL for entering aircraft ODD FL for exiting aircraft
DOBAR	411958N 0202941E	M22, N137, N141, T197, T214, T216, P127	(E/X) Entry Exit Point	ODD FL for entering aircraft EVEN FL for exiting aircraft
ERANA	410948N 0221422E	L737, T262, T389	(X) Exit Point	ODD FL for exiting aircraft flying eastbound EVEN FL for exiting aircraft flying westbound
GOSTI	414842N 0210630E	P92, T217	(A/D) Arrival Departure Point	
KOGAT	420645N 0210320E	L616, L737, M867, Y550	(E) Entry Point	ODD FL for entering aircraft
KORIV	413515N 0221218E		N/A	
LETNI	420549N 0223621E	N731, P92, T214, T262, T263	(E) Entry Point	EVEN FL for entering aircraft
LONTA	420934N 0212350E	L608, M749, P20, P859	(X) Exit Point	EVEN fl for exiting aircraft
MAKED	410745N 0223100E	L617, P20, P36	(E/X) Entry Exit Point	EVEN FL for entering aircraft ODD FL for exiting aircraft
MAVAR	414012N 0203148E	N130, N132, N146, P92, T198, Y400	(E/X/A) Entry Exit Arrival Point	ODD FL for entering aircraft EVEN FL for exiting aircraft
NASKO	414601N 0220552E	N140, P36, T389, P127	N/A	
NEGOT	411912N 0222332E	P36, Y400	N/A	

Name-code designator	Coordinates	ATS route or other route	FRA Relevance	Remarks/Usage
OLOTA	421348N 0213700E	L603	(E) Entry Point	ODD FL for entering aircraft
RAXAD	421830N 0221434E	L617, N128, N140, P36, T216, T261	(E/X/D) Entry Exit Departure Point	ODD FL for entering aircraft EVEN FL for exiting aircraft
RUGAS	411946N 0224729E	L603, N128	(E/X/A/D) Entry Exit Arrival Departure Point	EVEN FL for entering aircraft ODD FL for exiting aircraft
SARAX	420549N 0205344E	T215, T217, Y500	(E/A) Entry Arrival Point	Entry point for departure LYPR (BKPR) only EVEN FL for entering aircraft
TALAS	410436N 0215500E	M22, M749, N130, N140, T217	(E/X) Entry Exit Point	EVEN FL for entering aircraft ODD FL for exiting aircraft
TETOV	415836N 0205924E	T198, T217	(A/D) Arrival Departure Point	
TIKVA	412018N 0215524E		N/A	
TUTAM	415646N 0220107E		N/A	
VELBA	415800N 0225300E	T215, T343, P127	(X) Exit Point	ODD FL for exiting aircraft
XAXAN	420812N 0211937E	T197, T218, T263	(X) Exit Point	Exit point fo Arrival LYPR (BKPR) only ODD FL for exiting aircraft